


Children's Deckchair: Instruction for assembly and usage

Please read the following instruction before using the product

Name of product:	wooden children's deckchair
Purpose:	indoors/outdoors
Packaging:	cardboard + PE foil
Raw material:	beech wood
Fabric:	Adventure fabric, 100% polyester, 220g/m2

App. dimensions after folding: 95x46,5 cm

Producent:

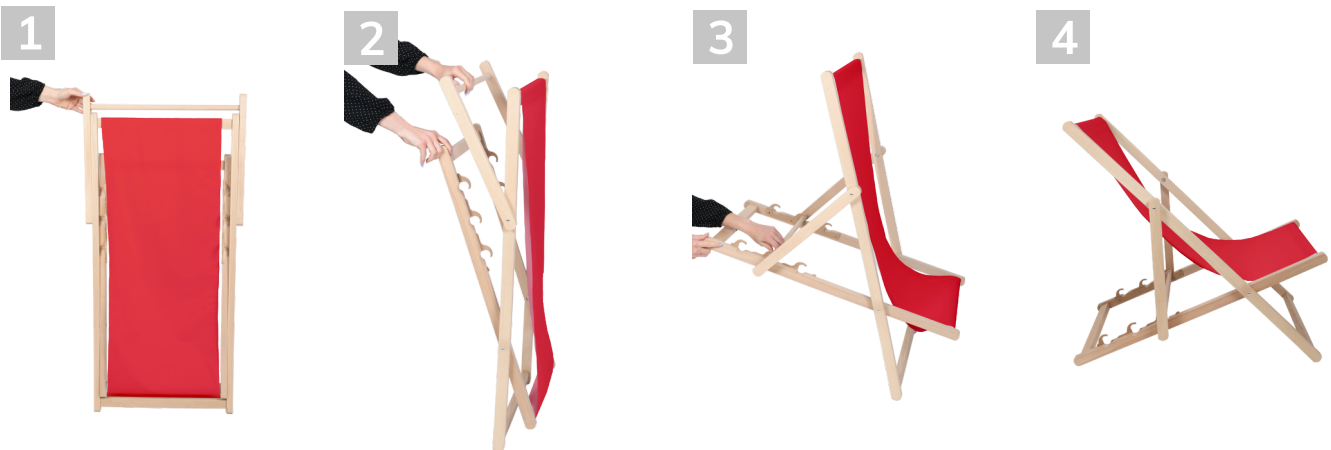

Usage manual:

1. To unfold product, please follow steps 1 to 4, shown in the pictures above.
2. The deckchair should be placed on an even and horizontal surface.
3. Before using the deckchair, it is necessary to check the correct position of the crossbar, which should be in plastic clamps on both sides (see photos).
4. To put the fabric on the deckchair, insert wooden slats, which are included with the deckchair, in the tunnels at the ends of the fabric. Next, wrap the fabric around the upper and lower seat slats and insert the bar into the slot there.



Usage and care:

Using the deckchair properly will extend its durability and allow comfortable use for many years.
To ensure its good condition:

1. Protect the deckchair against long-term adverse weather conditions (rain, moisture, frost). Especially after use.
2. In case of rain, wipe the deckchair afterwards to remove water.
3. Dirt on the frame can be removed with a damp sponge.
4. The fabric of the deckchair can be disassembled and washed to remain refreshed or to remove dirt.

Don't:

1. Let more than one person use the deckchair at the same time.
2. Stand on the lounge slats or on the fabric.
3. Let children unfold the deckchair.
4. Let children use the deckchair without adult supervision.
5. Use the product if defected: in case of holes in the fabric or cracks in the frame.
6. Use the deckchair when under the influence of psychoactive substances.
7. Insert your limbs between the sides of the frame during assembly and use.
8. Use the product during strong, gusty wind.
9. Use the product near active gas heaters or other sources of fire, as there is a risk of spontaneous combustion. The minimum distance to be kept is 2.5 m.
10. Move or lift the deckchair with people or objects on it.
11. Use the deckchair when pregnant without extra care.

Deckchair's dimensions:

